

PowerView™ Motorisering

Smarta gardiner som gör livet lite enklare

Rullgardiner

Kontrollera att dina gardiner är korrekt monterade och att de är kopplade till batterirör eller transformator.

BETJÄNING


Välj en eller flera kanaler, eller ALL (alla) samtidigt. Den valda kanalen kommer att lysa.

- Tryck på ▼ CLOSE för att sänka rullgardinen.
- Tryck på ▲ OPEN för att höja rullgardinen.
- Tryck på (VÄNSTER PILKNAPP) för att sänka gardinen i ett sakta tempo.
- Tryck på (HÖGER PILKNAPP) för att höja gardinen i ett sakta tempo.
- Tryck på ■ STOPP för att ställa rullgardinen i en specifik position.

Tryck på ♥ FAVORIT för att placera rullgardinen i din förinställda favoritposition. Se Quickstart guide för inställning av favoritposition.

BETJÄNING UTAN FJÄRRKONTROLL

- Vill du sänka rullgardinen, tryck in och håll kvar rullgardinens programmeringsknapp i 3 sekunder.
- Stanna rullgardinen genom att trycka på programmeringsknappen igen.
- Höj gardinen genom att trycka in och håll kvar rullgardinens programmeringsknapp i 3 sekunder.

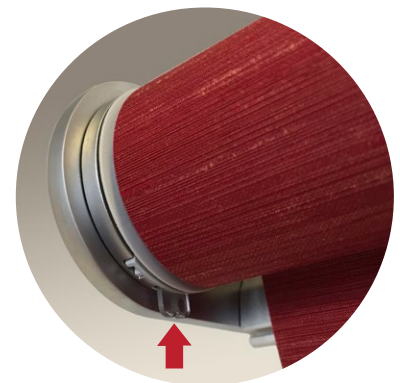

Programmeringsknapp



www.luxaflex.se/powerview-installation

All rights reserved. Unauthorised copying is prohibited. Technical data subject to change without notice. No rights can be derived from copy, text pertaining to illustrations or samples. Subject to changes in materials, parts, compositions, designs, versions, colours etc., even without notice. * Registered trademark. A HunterDouglas® product. © Copyright HunterDouglas® 2016.