

Installation TopFix / RecessFix [R1]


Do not damage the product when using a sharp knife to open the packaging! Fitting screws: Use a size-2 screwdriver (PO-ZIDRIVE) or use an electric screwdriver at it's lowest torque. Rail removal: Use a flat screwdriver of max. 6 mm wide. Only

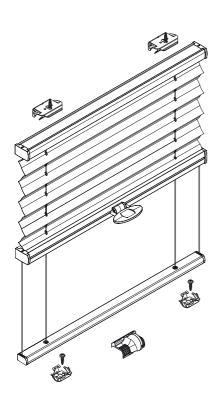


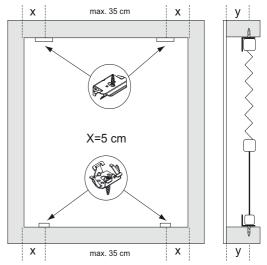



Product width	Number of parts							
0 - 80 cm	3	3	1	6				
81 - 115 cm	4	4	1	8				
116 - 150 cm	5	5	1	10				




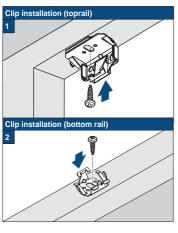


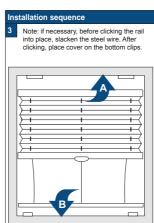


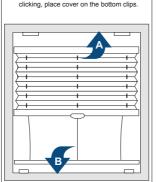

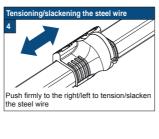

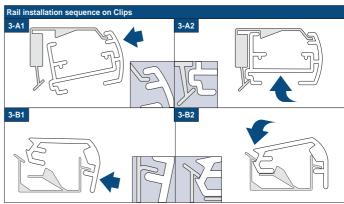

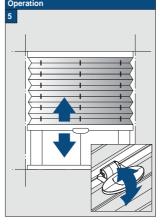


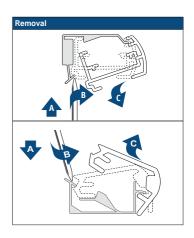

FaceFix installation to a window frame / wall [F1]

Do not damage the product when using a sharp knife to open the packaging! Fitting screws: Use a size-2 screwdriver (PO-ZIDRIVE) or use an electric screwdriver at it's lowest torque. Rail removal: Use a flat screwdriver of max. 6 mm wide. Only



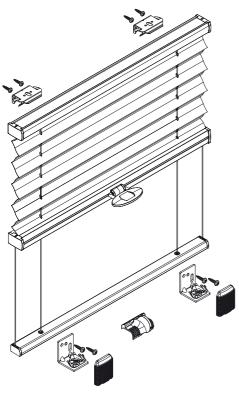

Product width	Number of parts								
0 - 80 cm	3	3	3	3	1	12	3		
81 - 115 cm	4	4	4	4	1	16	4		
116 - 150 cm	5	5	5	5	1	20	5		

